

USER MANUAL

Fingerprint Secure USB Drive

Dear user

Thank you for selecting the **Verbatim Fingerprint Secure USB Drive** as your external data storage device.

For optimal use and performance we advise you to read this manual carefully before using this product.

Please note: this manual is a general manual which is used for several Verbatim products. Product pictures shown in this manual may differ from the device you purchased.

Contents of the box

Please check the contents of the box. All articles included in this box are listed on the back of the packaging.

Need assistance? Have questions?

If you have a question concerning this product, need information on other Verbatim products or require technical assistance, please contact the Verbatim Support Centre. Please visit www.verbatim.com/support for details.

Warning!

All rights reserved. The products named in this manual are only used for identification purposes and may be trademarks or registered trademarks of the respective companies. This device was designed for home or office use.

Warning! This device is equipment complying with EN55032 class A. This equipment can cause radio disturbances in a residential area. If this is the case, the user has to take appropriate measures and assume all responsibility and costs for. It may not be used near or with any life-sustaining systems.

Verbatim cannot be made liable for any damages, loss of data or damage following thereof -whatsoever (including, without limitation, damages for loss of business profits, business interruption, loss of business information, or other pecuniary loss) arising out of the use of or inability to use this Verbatim product, even if Verbatim has been advised of the possibility of such damages.

We reserve the right to upgrade our products in keeping with technological advances.

Table of Contents

General Information.....page 4

Chapter 1

Setting up an Administrator using Fingerprint Secure User Manager Softwarepage 5

Chapter 2

Adding / removing / editing username or privileges using
Fingerprint Secure User Manager Softwarepage 7

Chapter 3

Accessing the Secure Partition without using the Fingerprint Secure Software.....page 8

Chapter 4

Accessing the Secure Partition using the Fingerprint Secure Softwarepage 9

Rightspage 10

FCC Compliancepage 11

WEEE Noticepage 11

CE Declarationpage 12

RoHS Compliancepage 12

General Information

Features:

- Supports USB Super-speed (5Gbps) / High-speed (480Mbps) / full-speed (12Mbps) operation
- Supports Windows 7 / 8 / 10, Mac OS X 10.4 or higher
- Includes 256-bit AES Hardware Encryption
- Fingerprint recognition to prevent unauthorised users accessing your data

Specifications:

- Interface: USB 3.0

System Requirements:

PC:

- Minimum Intel Processor Pentium II/50MHz, 64MB RAM
- Windows 7 / 8 / 10
- Active USB port

MAC:


- Minimum Apple G processor, 64MB RAM
- Mac OS 9.1, 9.2, 10.1.5, 10.2, 10.3
- Active USB port

Package Contents:

- Verbatim Fingerprint Secure USB Drive
- User Manual (pre-loaded to the drive)


Chapter 1: Setting up an Administrator using Fingerprint Secure User Manager Software

1. Connect Fingerprint Secure to your PC. A removable disk ("Fingerprint Secure") and a Virtual DVD RW Drive ("DVD RW Drive") will appear in "My Computer". The Virtual DVD RW Drive is an undeletable partition on your Fingerprint Secure on which the Fingerprint Secure software and user manuals are stored.
2. If the virtual DVD-RW drive does not automatically open after the Fingerprint Secure has been connected, double-click on the Virtual CD ROM drive icon ("CD ROM Drive") to open it.
3. Double-click on the Fingerprint Secure User Manager application icon. When the application opens you will be asked to set up an administrator password. This password is a backup access method for the administrator.

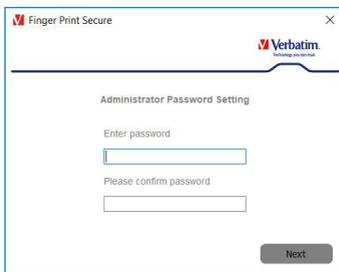


The screenshot shows a window titled "Finger Print Secure" with the Verbatim logo in the top right corner. The main content area is titled "Administrator Password Setting". It contains two text input fields: the first is labeled "Enter password" and the second is labeled "Please confirm password". A "Next" button is located at the bottom right of the dialog.

- You will be asked to enrol an administrator fingerprint. Enter the user name and select Read Only if the administrator will not be able to make changes to data stored in the secure partition. Gently press your finger on the sensor and release, then press again. Tilt and roll your finger slightly each time and keep pressing until the process is complete.

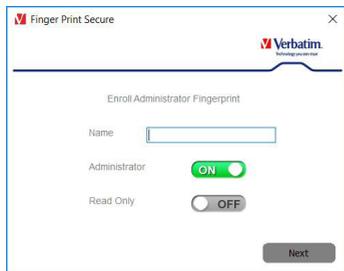

- If the administrator's fingerprint is correctly enrolled you will see the user name in the table of authorised users.

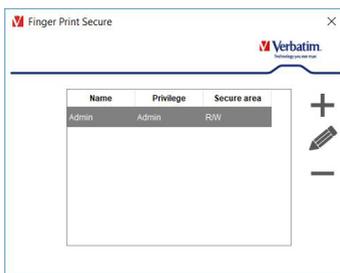

Chapter 2: Adding / removing / editing username or privileges using Fingerprint Secure User Manager Software

1. Open the Fingerprint Secure User Manager application as outlined in steps 1-3 of the previous section. Note, adding/removing/editing a user is only possible if you are a registered Administrator.



2. To add a user click the + symbol and follow the same sequence as registering the Administrator's fingerprint
3. To remove a user, select the username in the table of authorised users and click the – symbol.
4. To edit a username or change their privileges, select the username in the table of authorised users and click the pencil symbol.

Overview of User Privileges:

Administrator:

You can only use the “Fingerprint Secure User Manager” software if you are an administrator.

Read Only:

User can only read data in the secure partition and is are not able to add, change delete files.

Chapter 3: Accessing the Secure Partition without using the Fingerprint Secure Software


1. Connect Fingerprint Secure to your PC and wait until the LED stops flashing.
2. Gently put your finger on the sensor. If the secure partition will doesn't open automatically, try again touching a different part of your fingerprint on the sensor.
3. Double click the secure partition file folder in "My Computer" to access the secure data.

Chapter 4: Accessing the Secure Partition using the Fingerprint Secure Software

1. Connect Fingerprint Secure to your PC and open the Fingerprint Secure application.



2. Gently put your finger on the sensor. If the fingerprint is recognised the software will display a tick and the secure partition will open.

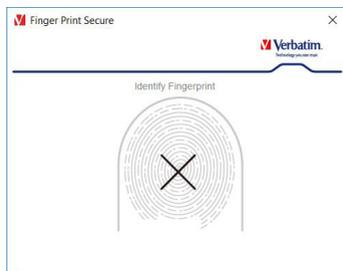

3. If the fingerprint is not recognised the software will display an X. Try again touching a different part of your fingerprint on the sensor.



Rights

Copyright © 2019 Verbatim GmbH. No part of this document may be reproduced in any form or by any means, for any purpose, without the express written permission of Verbatim GmbH. All rights reserved.

All other brands and product names referenced herein are property of their respective owners.

Note

Verbatim GmbH may at any time revise the content of this user guide without further notice.

FCC Compliance

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

WEEE Notice

The Directive on Waste Electrical and Electronic Equipment (WEEE), which entered into force as European law on 13th February 2003, resulted in a major change in the treatment of electrical equipment at end-of-life.



The WEEE logo (shown at the left) on the product or on its box indicates that this product must not be disposed of or dumped with your other household waste. For more information about electronic and electrical waste equipment disposal, recovery, and collection points, please contact your local municipal household waste disposal service or shop from where you purchased the equipment.

CE Declaration

Complied the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (2014/30/EC) and Low Voltage Protection 2006/95/EC.

This declaration applies to all specimens manufactured identical to the model submitted for testing/evaluation.

EN 55032:2012+ AC:2013 (Class B)

EN 61000-3-2:2014

EN 61000-3-3:2013

AS/NZS CISPR 32:2013

EN 55024:2010

IEC 61000-4-2: 2008

IEC 61000-4-3: 2006+ A1:2007+ A2:2010

IEC 61000-4-4: 2013

IEC 61000-4-5: 2014

IEC 61000-4-6: 2013

IEC 61000-4-8: 2009

IEC 61000-4-11: 2004

RoHS Compliance

This product is in compliance with Directive 2011/65/EU of the European Parliament and of the Council of 18 December 2006 , on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS) and its amendments. Substances of Very High Concern (SVHC) including 169 substances contained in Candidate List of June 20th 2016 are not present in this product range above permitted levels.