

USER MANUAL

Fingerprint Secure Hard Drive

Dear user

Thank you for selecting the **Verbatim Fingerprint Secure Hard Drive** as your external data storage device.

For optimal use and performance we advise you to read this manual carefully before using this product.

Please note: this manual is a general manual which is used for several Verbatim products. Product pictures shown in this manual may differ from the device you have purchased.

Contents of the box

Please check the contents of the box. All articles included in this box are listed on the back of the packaging.

Need assistance? Have questions?

If you have a question concerning this product, need information on other Verbatim products or require technical assistance, please contact the Verbatim Support Centre. Please visit www.verbatim.com/support for details.

Warning!

All rights reserved. The products named in this manual are only used for identification purposes and may be trademarks or registered trademarks of the respective companies. This device was designed for home or office use.

Warning! This device is equipment complying with EN55032 class A. This equipment can cause radio disturbances in a residential area. If this is the case, the user has to take appropriate measures and assume all responsibility and costs for. It may not be used near or with any life-sustaining systems.

Verbatim cannot be made liable for any damages, loss of data or damage following thereof -whatsoever (including, without limitation, damages for loss of business profits, business interruption, loss of business information, or other pecuniary loss) arising out of the use of or inability to use this Verbatim product, even if Verbatim has been advised of the possibility of such damages.

We reserve the right to upgrade our products in keeping with technological advances.

Table of Contents

General Information.....	page 4
--------------------------	--------

Chapter 1

Hardware Installation.....	page 5
----------------------------	--------

Chapter 2

Add a Fingerprint	page 6
-------------------------	--------

Chapter 3

Adding / removing / editing username using Fingerprint Secure User Manager Software	page 8
--	--------

Chapter 4

Locking your device with your Fingerprint	page 9
---	--------

Chapter 5

Accessing the Secure Partition without using the Fingerprint Secure Software.....	page 9
---	--------

Chapter 6

Accessing the Secure Partition using the Fingerprint Secure Software	page 9
Limited Warranty Terms	page 10
Rights	page 10
FCC Compliance	page 10
WEEE Notice	page 11
CE Declaration	page 12
RoHS Compliance	page 12

General Information

Features:

- Supports USB Super-speed (5Gbps) / High-speed (480Mbps) / full-speed (12Mbps) operation
- Supports Windows 7 / 8 / 10, Mac OS X 10.4 or higher
- Includes 256-bit AES Hardware Encryption
- Fingerprint recognition to prevent unauthorised users accessing your data

Specifications:

- Interface: USB 3.1 GEN 1

System Requirements:

PC:

- Minimum Intel Processor Pentium II/50MHz, 64MB RAM
- Windows 7 / 8 / 10
- Active USB port

MAC:

- Minimum Apple G processor, 64MB RAM
- Mac OS 9.1, 9.2, 10.1.5, 10.2, 10.3
- Active USB port

Package Contents:

- Verbatim Fingerprint Secure Hard Drive
- Nero Backup Software
- USB-C™ to USB-A Cable (includes USB-C™ adapter)
- Quick Installation Guide
- User Manual (pre-loaded to the drive)

Chapter 1: Hardware Installation

1. Connect device to PC.
2. Start software “VerbatimSecure.exe” on the CD-Drive.
3. Confirm license agreement.



4. Enter password (default: “666666”) and proceed with “Next”.




Note:

Selecting "Forget Password" will result in the drive being formatted and all data being erased!

We recommend changing the default password on your first use of the product.


Chapter 2: Add a Fingerprint

 1. Connect Fingerprint Secure HDD to your PC. A removable disk ("Fingerprint Secure") and a Virtual DVD RW Drive ("DVD RW Drive") will appear in "My Computer". The Virtual DVD RW Drive is an undeletable partition on your Fingerprint Secure on which the Fingerprint Secure software and user manuals are stored.
2. If the virtual DVD-RW drive does not automatically open after the Fingerprint Secure has been connected, double-click on the Virtual CD ROM drive icon ("CD ROM Drive") to open it.
3. Double-click on the Fingerprint Secure User Manager application icon. When the application opens you will be asked to enter the default password "666666".
4. Click "Change password" to change default password and follow the instructions.

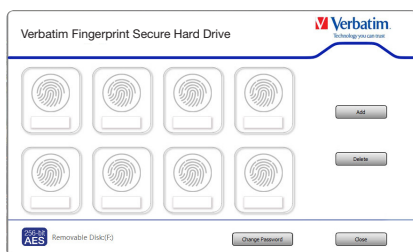


 5. Please swipe finger and roll from right to left until the process is complete.




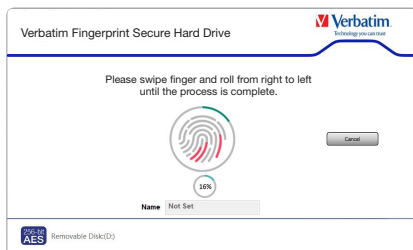


 
6. Enter a name and press “OK”.

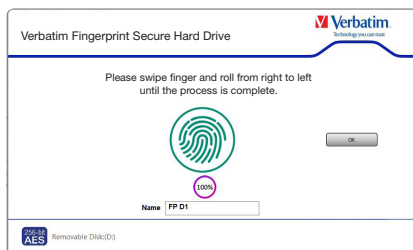

 7. If the administrator’s fingerprint is correctly enrolled you will see the user name in the table of authorised users.

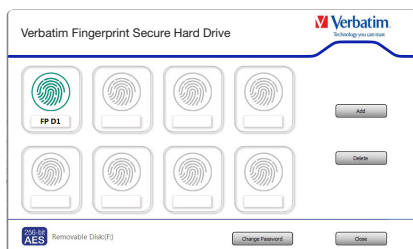

Chapter 3: Adding / removing / editing username using Fingerprint Secure User Manager Software

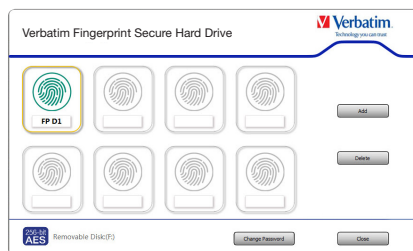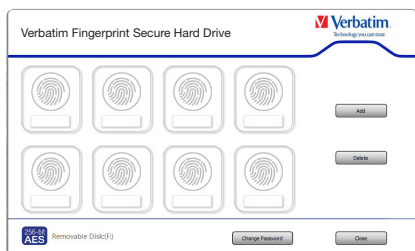  

1. Open the Fingerprint Secure User Manager application as outlined in steps 1-3 of the previous section.
2. To add a user click the “add” symbol and follow the same sequence as registering the Administrator’s fingerprint.
3. To remove a user, select the username in the table of authorised users and click the “delete” symbol.
4. To edit a username, double click on the user.

Chapter 4: Locking your device with your Fingerprint

1. Gently press your finger on the sensor and release to relock your device.

Chapter 5: Accessing the Secure Partition without using the Fingerprint Secure Software

1. Connect the Fingerprint Secure to your PC. Gently put your finger on the sensor. If the fingerprint is recognised the locked partition will unlock and a green LED on the device will light up.

Chapter 6: Accessing the Secure Partition using the Fingerprint Secure Software

1. Connect Fingerprint Secure to your PC, open the application and enter your password. This will unlock the locked partition.

Limited Warranty Terms

Verbatim GmbH warrants this product to be free from defects in material and workmanship for a period of 2 years from date of purchase.

This warranty excludes batteries. If this product is found to be defective within the warranty period, it will be replaced at no cost to you. You may return it with your original cash register receipt to the place of purchase or contact Verbatim.

Product replacement is your sole remedy under this warranty, and this warranty does not apply to normal wear or to damage resulting from abnormal use, misuse, abuse, neglect or accident, or to any incompatibility or poor performance due to the specific computer software or hardware used.

VERBATIM WILL NOT BE LIABLE FOR DATA LOSS OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES, HOWEVER CAUSED, FOR BREACH OF WARRANTIES OR OTHERWISE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or country to country.

Note

Verbatim GmbH may at any time revise the content of this user guide without further notice.

Rights

Copyright © 2019 Verbatim GmbH. No part of this document may be reproduced in any form or by any means, for any purpose, without the express written permission of Verbatim GmbH. All rights reserved.

All other brands and product names referenced herein are property of their respective owners.

FCC Compliance

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

WEEE Notice

The Directive on Waste Electrical and Electronic Equipment (WEEE), which entered into force as European law on 13th February 2003, resulted in a major change in the treatment of electrical equipment at end-of-life.



The WEEE logo (shown at the left) on the product or on its box indicates that this product must not be disposed of or dumped with your other household waste. For more information about electronic and electrical waste equipment disposal, recovery, and collection points, please contact your local municipal household waste disposal service or shop from where you purchased the equipment.

CE Declaration

Complied the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (2014/30/EC) and Low Voltage Protection 2006/95/EC.

This declaration applies to all specimens manufactured identical to the model submitted for testing/evaluation.

EN 55032:2012+ AC:2013 (Class B)

EN 61000-3-2:2014

EN 61000-3-3:2013

AS/NZS CISPR 32:2013

EN 55024:2010

IEC 61000-4-2: 2008

IEC 61000-4-3: 2006+ A1:2007+ A2:2010

IEC 61000-4-4: 2013

IEC 61000-4-5: 2014

IEC 61000-4-6: 2013

IEC 61000-4-8: 2009

IEC 61000-4-11: 2004

RoHS Compliance

This product is in compliance with Directive 2011/65/EU of the European Parliament and of the Council of 18 December 2006 , on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS) and its amendments. Substances of Very High Concern (SVHC) including 169 substances contained in Candidate List of June 20th 2016 are not present in this product range above permitted levels.