

## English


### Updater Manual for Store ´n Go Fingerprint HDD

**Important:**

**The updater tool only works for computers using Windows operating systems.**

To update the Firmware and Software of your device please follow below instructions:

1. Download the Zip-file with the updater from the support section.
2. Unpack the compressed file to any folder.
3. Start "QuickUpdateFW.exe" in the extracted folder 1. Firmwareupdate.
4. Attach your device to any USB port of your PC and update should run automatically, the update process will be confirmed to be completed by the updater.
5. Close updater tool.
6. Disconnect and reconnect your device to your PC.
7. Start "QuickUpdateISO.exe" in the extracted folder 2. Softwareupdate.
8. Disconnect and reconnect your device to your PC.
9. Check if update was successful by starting the software on the devices virtual CD-Drive. It should now state as below "V1.2".

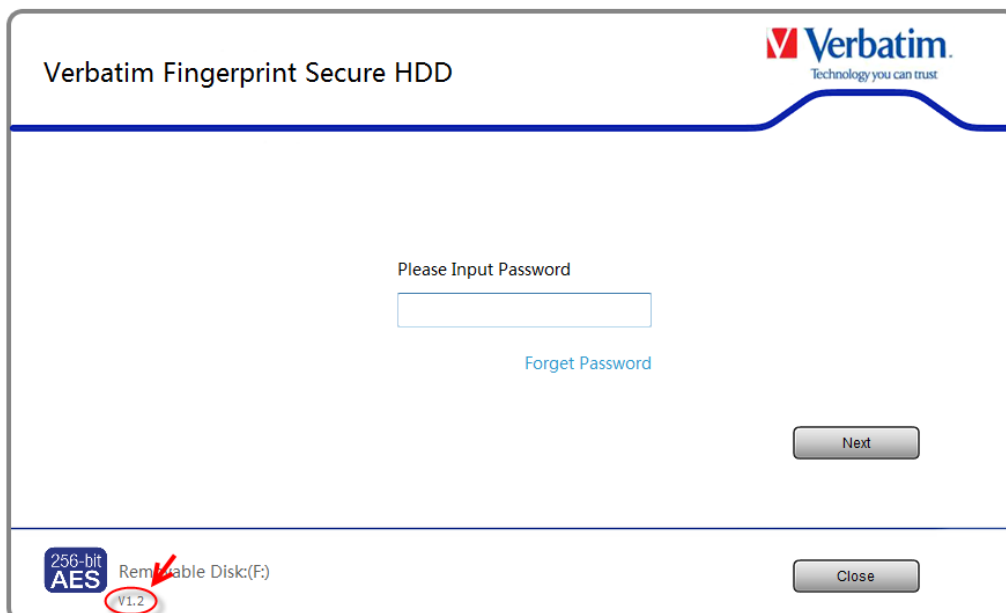

The update of your device to the latest Firmware and Software is now completed.

## Deutsch


# Anleitung für die Benutzung der Updatetools für die Store 'n Go Fingerprint HDD

### Wichtig:

**Das Aktualisierungstool funktioniert lediglich auf Computern mit Windows Betriebssystem.**

Um die Firmware und Software Ihres Gerätes zu aktualisieren folgen Sie bitte den nachfolgenden Schritten:

1. Laden Sie die Zip-Dateien mit den Updatern aus dem Supportbereich.
2. Entpacken Sie die .zip Dateien in einen beliebigen Ordner.
3. Starten Sie die "QuickUpdateFW.exe" im Ordner 1. Firmwareupdate
4. Schließen Sie nun Ihr Gerät an einem USB-Port Ihres Rechners an, die Aktualisierung Ihres Gerätes wird nun vom Programm automatisch durchgeführt und bei Abschluss bestätigt.
5. Schließen Sie nun das Programm.
6. Trennen Sie die Verbindung Ihres Gerätes und verbinden es erneut mit Ihrem Computer.
7. Starten Sie die "QuickUpdateISO.exe"(Softwareupdate) im Ordner 2. Softwareupdate
8. Trennen Sie die Verbindung Ihres Gerätes und verbinden es erneut mit Ihrem Computer.
9. Überprüfen Sie ob das Update erfolgreich war indem Sie die Software auf dem virtuellen CD-Laufwerk Ihres Gerätes starten. Diese sollte jetzt wie unten "V1.2" anzeigen.

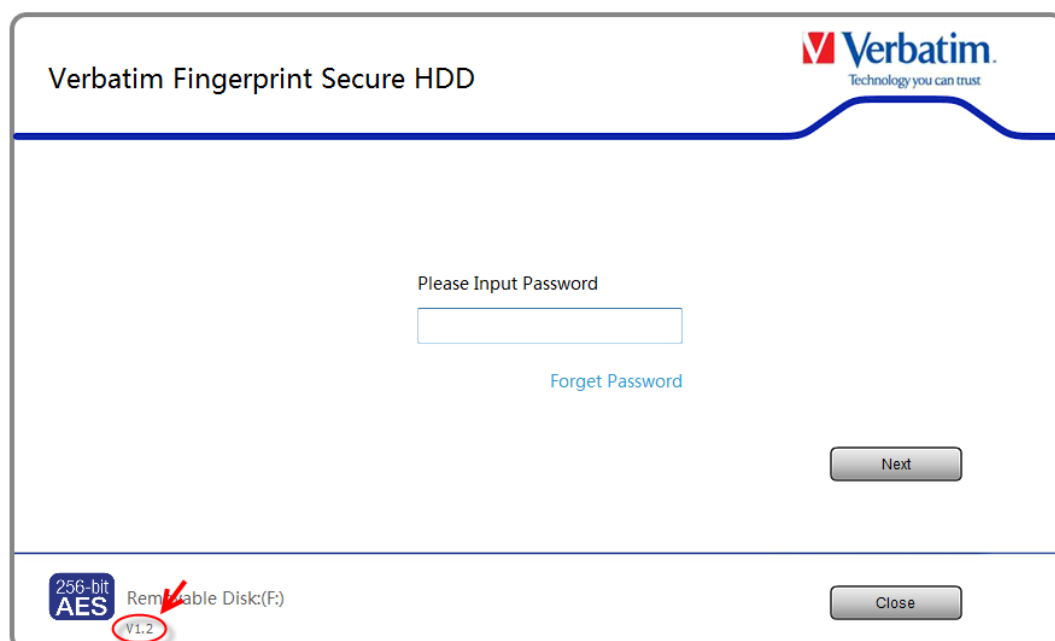

Hiermit ist das Update auf die aktuelle Firmware und Software abgeschlossen